


BungeeBoard™- Installation Guide


Thank you for your purchase of a genuine TSN Off-Road BungeeBoard. We're sure you will enjoy the utility and flexibility BungeeBoard offers for years to come. Please read this Installation Guide in it's entirety and watch our installation video before installing your BungeeBoard. Failure to do so could result in damage to your vehicle or BungeeBoard.

Package Contents

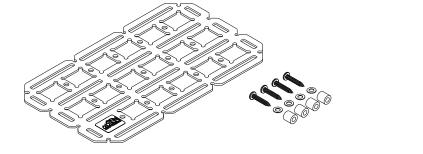


BungeeBoard	1
#12 Self Tapping Screws	4-6
Washers	4 - 6
Nylon Spacer	4-6

Tools Required

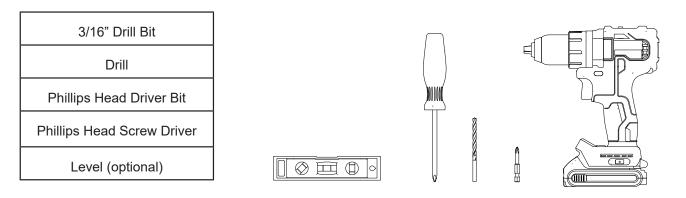

Vehicle Preparation

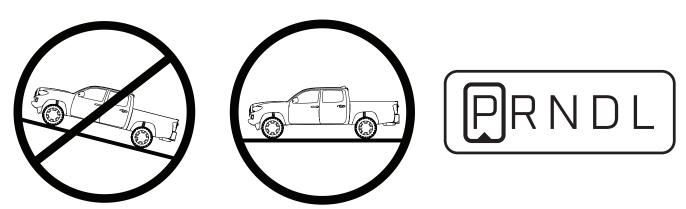

Park your vehicle on a flat, level surface, such as a poured concrete slab or inside a garage. Ensure vehicle is in PARK before proceeding.



BungeeBoard[™]- Installation Guide

Installation

- **1.** Clean area where BungeeBoard is to be installed removing all debris. Pick a spot where drilling holes will not interfere with electrical or mechanical components and where screws will not be seen from the other side.
- 2. With the help of a friend, place the panel in the desired location. Using the 3/16" drill bit create a single pilot hole on the top corner, using either a mounting hole or mounting slot. Make only one pilot hole for now.
- **3.** Arrange the nylon spacer, washer, and self tapping screw as illustrated and gently begin driving the screw into the mounting surface. **DO NOT tighten all the way.**
- **4.** Arrange the panel to be level. With panel correctly oriented, drill second pilot hole. With 2 screws in place you can now fasten remaining screws.

Note: For larger panels, attach all 4 corner screws before adding 2 additional screws to middle of panel.


 With all screws loosely fastened, use a screw driver to tighten screws until snug. Be careful to not overtighten screws.


Questions or Feedback?


Contact us! support@tsnoffroad.com

Video Instructions



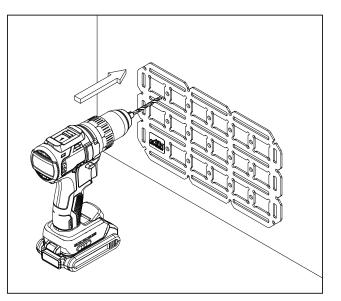

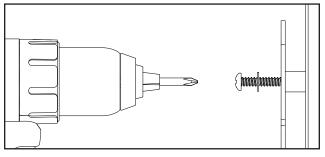

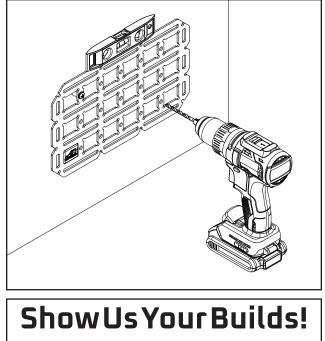

@tsnoffroad | TSNOFFROAD.COM